


Replacement of compass.

Open compass binnacle:

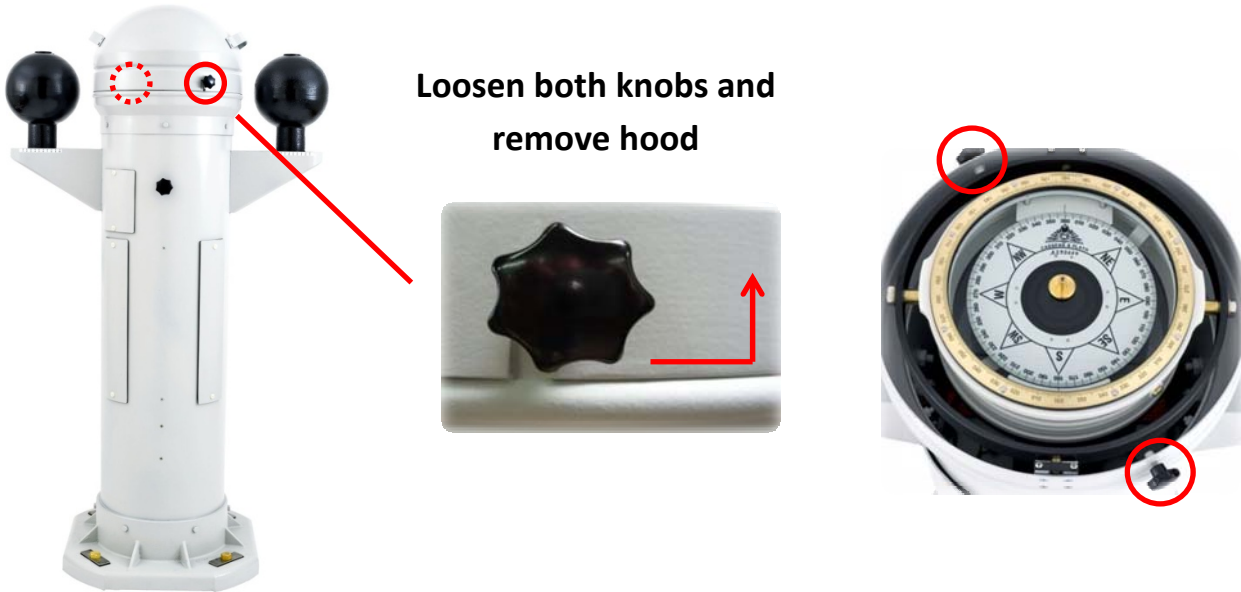

Swing compass to disconnect detector:



Unplug detector cable

Position of junction box can be as shown but also behind the cover in the binnacle base

Take out the compass of the binnacle:



Reassembling will be done in reverse order. Take attention of ahead marking on compass bowl! Compass may swing within its balance ring, take care of your fingers! Make sure that cables do not obscure reflection sight nor impair free swing of the compass

