


Disassembling of detector:

- Switch off connected equipment.
- Unplug detector from junction box within compass binnacle.
- Take out magnetic compass from compass binnacle.
- Turn around compass and place it upside down.
- Take care that compass is not laying on center-piece.

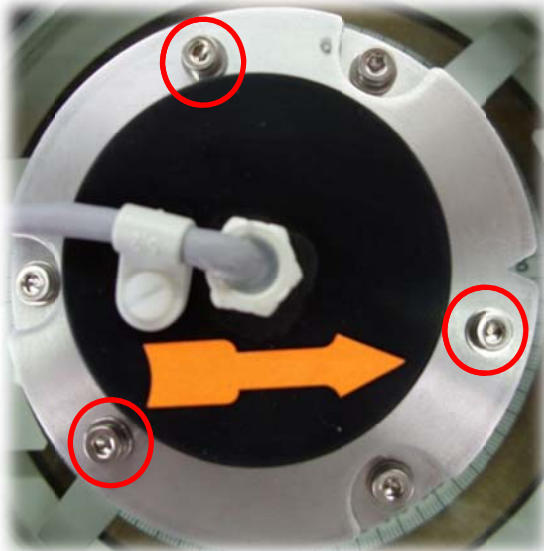

Remove the three marked screws.



Detector can be removed from distance cylinder.



Reassembling will be made in reverse order. The pieces of distance cylinder have a north marking to simplify assembling. Detector has to be turned until readout at repeater matches reading of magnetic compass.

After work is finished the readout of heading repeater and readout of magnetic compass have to be controlled within a full circle. If transmission errors are noticed, a calibration has to be done. For details of calibration refer to user manual of installed equipment.