


CAMcourse replacement of camera:

- Locate junctionbox “monitor”, and open it.
- Completely switch of the CAMcourse system by removing the two power plugs within the junctionbox “monitor”.



unplug

- Locate camera and junctionbox “camera” within the compass binnacle.
- Open junctionbox “camera”.
- Loosen cable gland facing toward camera.
- Loosen the four cable connections of camera, make sure to note the sequence of cable colours.
- Remove camera cable out of cable gland.

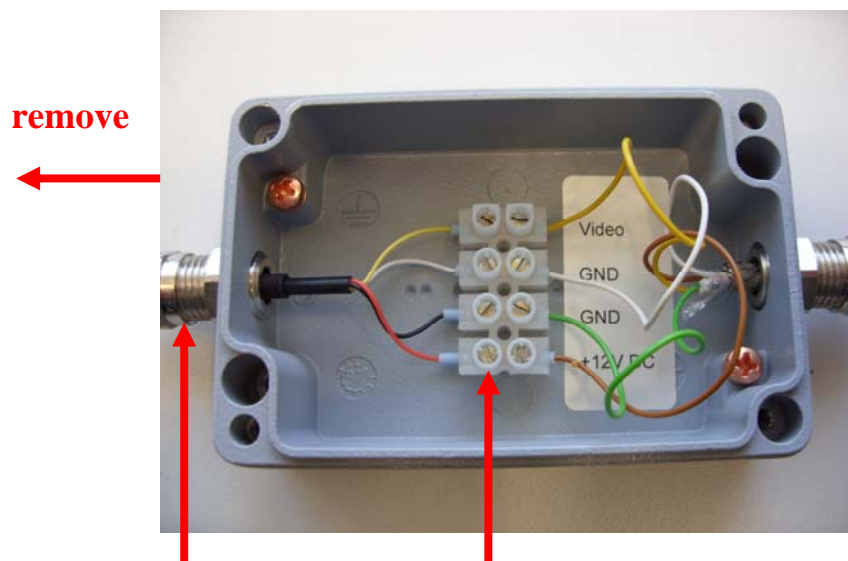

remove

loosen

disconnect

- Remove fixing screws and arrest knob from camera.



remove

- Exchange camera with ground plane.



- Reassemble in reverse order!